



- 1. Rectifier Connectors: Y312U-3S Y312U-2S
- 2. PPS Main
- 3. Positive Bus Bar: 1/4" Ring Terminal
- 4. Negative Bus Bar: 1/4" Ring Terminal
- 5. Alternator: Y312U-3P
- 6. Starter: 7/16" Ring Terminal
- 7. VP-X Power Lug: 1/4" Ring Terminal
- 8. Batt -: 1/4" Ring Terminal
- 9. Batt +: 1/4" Ring Terminal